


Mainfold Bases

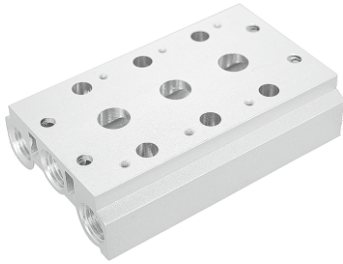

The Use Occasion For Seal Plate

When the station number exceeds the number of the solenoid (air control) valve, you can seal the unnecessary station by the seal plate temporarily. Replace it for the time being during the valve increase, thus it may reach the goal of system expansion.

Manifold Product Code System




Example

For order of 10-station manifold for 4V(A)2 series solenoid valve, the correct order code is: 200M - 10F.

Seal Plate Product Code System



Dimensions

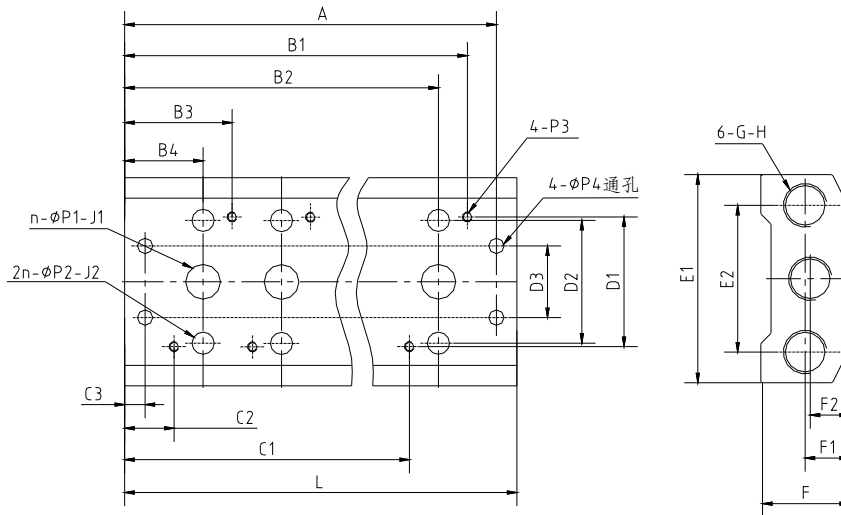

型号 / Model	L	A	B1	B2	B3	B4	C1	C2	C3	D1	D2	D3
100M - F	19(n+1)	19n+14	19n+6.5	19n	25.5	19	19n-6.5	12.5	5	30	28	20
200M - F	23(n+1)	23n+17	23n+8.5	23	31.5	23	23n-8.5	14.5	6	38	36	21
300M - F	28n+26	28n+20	28n+9	28n-1	37	27	28n-11	17	6	50	45	26
400M - F	35n+28	35n+21	35n+10	35n-3.5	45	31.5	35n-17	18	7	72	63	32

型号 / Model	E1	E2	F	F1	F2	G	H	J1	J2	P1	P2	P3	P4
100M - F	58	40	23.5	12	8.5	G1/4	13	11	12	8	6	M3X0.5	4.3
200M - F	60	43	23.5	13	11.5	G1/4		10	13	10.2	6.5	M3X0.5	4.5
300M - F	75	53	29	16.8	12.8	G3/8	17	9.5	16.8	13	8.5	M4X0.7	4.5
400M - F	98.5	71.2	35	19.5	13.6	G1/2	20	8	17	14.4	12.5	M4X0.7	7.5