


## ESC、ESU、ESF气缸安装附件

### I型附件

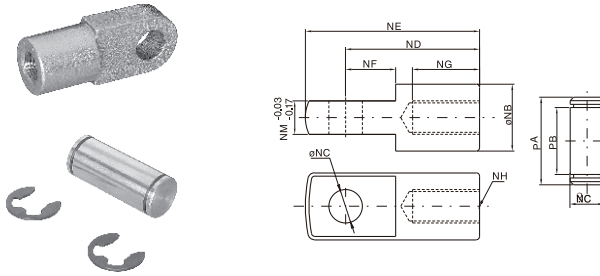

缸径/型号 Inner Dia./Code	NB	NC	ND	NE	NF	NG	NH	NM	PA	PB
32	18	10	40	49.5	19	16	M10X1.25	10	25	19
40	23	12	48	60	24	20	M12X1.25	12	32.8	26.5
50	28.5	16	63	79	32	30	M16X1.5	16	39.3	33
63	28.5	16	63	79	32	30	M16X1.5	16	39.3	33
80	38	20	80	100	57	40	M20X1.5	20	50.3	42
100	38	20	80	100	57	40	M20X1.5	20	50.3	42
125	44	20	103	122	55	50	M27X2	30	77	68